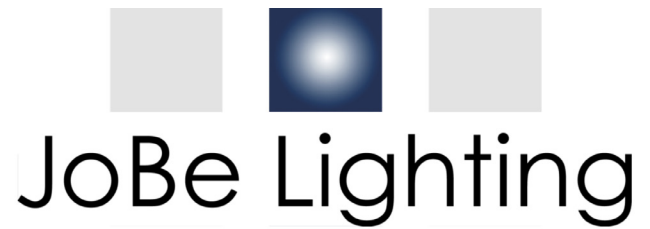
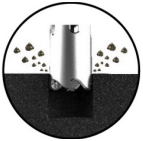



Installation Manual

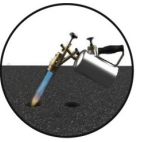
SOLAR BASIC

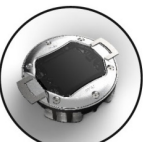


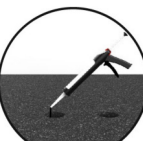
To do the installation Personal Protective Equipment must be worn during all process.

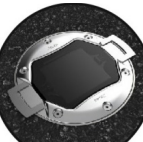
- **1 Drill Hole**

After deciding the location where the stud will be installed, drill a hole having a minimum diameter of 170mm and 60mm deep.
- **2 Clean Hole**

Brush any debris or dust from the hole resulting from drilling.
- **3 Dry Hole**

Dry the hole with a blowtorch to remove any moisture that may compromise the adhesion and effectiveness of the glue.
- **4 Insert Accessory**

Apply in each installed that will be installed the installation accessory. The accessory will help to align & keep the road stud in place during the glue drying time. This accessory will be removed at the end of the installation.
- **5 Apply Glue**

Pour TRIFLEX CRYL R 238 glue into the hole and insert the stud checking that the LEDs are facing the right way. Remove any excess glue.
- **6 Cure Glue & Remove Accessory**

The glue drying time may change depending on weather conditions. Consult the glue data sheet for more information



The warranty will not apply if a defect is attributable to failure of following these installation instructions.